




170.IU0.TXS.0A0 4.3-98/B

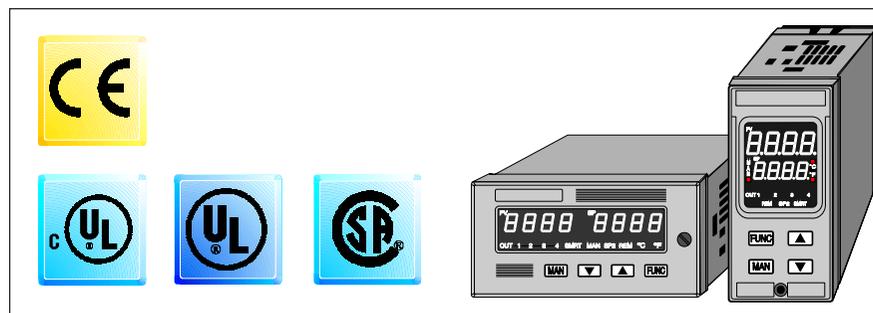

- USER MANUAL
-
-
-

TFS - THS



INDEX **GB**

MOUNTING REQUIREMENTS	1
OUTLINE AND CUT OUT DIMENSIONS	2
CONNECTION DIAGRAMS	4
PRELIMINARY HARDWARE SETTINGS	11
CONFIGURATION PROCEDURE	12
OPERATIVE MODE	20
Display function	20
Indicators	20
Pushbutton function during operating mode	21
Enable/disable the control output	21
Out 1 failure detection function	22
Manual function	22
Direct access to the set point	23
SP/SP2 selection	23
Serial link	23
SMART function	23
Lamp test	24
OPERATIVE PARAMETERS	24
ERROR MESSAGES	27
GENERAL INFORMATION	29
MAINTENANCE	33
DEFAULT PARAMETERS	A.1

INDEX **F**

MONTAGE	1
DIMENSIONS ET PERCAGE	2
RACCORDEMENTS ELECTRIQUES	4
MISE AU POINT PRELIMINAIRE	
DU MATERIEL INFORMATIQUE	11
PROCEDURES DE CONFIGURATION	12
DIALOGUE UTILISATEUR	20
Fonctionnement de l'indicateur	20
Indications	20
Fonctionnement des touches	
pendant le dialogue utilisateur	21
Autorisation/invalidation de la sortie	
de régulation	21
Alarme d'anomalie de la sortie 1	22
Fonctionnement MODE MANUEL	22
Modification directe du point de consigne	23
Selection consigne principale ou auxiliaire	23
Liaison numérique	23
Fonction SMART	23
Lamp test	24
PARAMETRES DE FONCTIONNEMENT	24
MESSAGES D'ERREUR	27
CARACTERISTIQUES TECHNIQUES	29
ENTRETIEN	33
DEFAULT PARAMETERS	A.1

INHALTSVERZEICHNIS

MONTAGE	1
ABMESSUNGEN UND FRONTTAFELAUSSCHNITT 2	2
ELEKTRISCHE ANSCHLÜSSE	4
HARDWAREEINSTELLUNGEN	11
KONFIGURATION	12
BETRIEBSMODUS	20
Anzeige - Funktionen	20
Statusinformationen der Anzeige	20
Funktion der Fronttasten	
während des Betriebs	21
Ein-/Ausschalten des Regelausgangs.	21
Alarm störung an ausgang 1	22
Manuell funktion	22
Direkter zugriff auf die setwerte	22
SP/SP2 AUSWAHL	23
Serielle Schnittstellenverbindung	23
SMART-Funktion	23
Lampen test	24
BETRIEBSPARAMETER	24
FEHLERMELDUNGEN	27
TECHNISCHE MERKMALE	29
WARTUNG	33
DEFAULT PARAMETERS	A.1

INDICE

MONTAGGIO	1
DIMENSIONI E FORATURA	2
COLLEGAMENTI ELETTRICI	4
IMPOSTAZIONI HARDWARE PRELIMINARI	11
PROCEDURE DI CONFIGURAZIONE	12
MODO OPERATIVO	20
Funzionalità del visualizzatore	20
Indicatori	20
Operatività dei tasti durante	
il modo operativo	21
Abilitazione/disabilitazione	
dell'uscita di regolazione	21
Allarme di anomalia sull'uscita 1	22
Funzionamento in modo MANUALE	22
Modifica diretta del set point	23
Selezione del set point operativo	23
Interfaccia seriale	23
Funzione SMART	23
Lamp test	24
PARAMETRI OPERATIVI	24
MESSAGGI DI ERRORE	27
CARATTERISTICHE TECNICHE	29
MANUTENZIONE	33
DEFAULT PARAMETERS	A.1

MOUNTING REQUIREMENTS

Select a mounting location where the instrument is subject to minimum vibration and the ambient temperature range is between 0 and 50 °C.

The instrument can be mounted on a panel up to 15 mm thick with a square cutout of 45 x 92 mm. For outline and cutout dimensions refer to Fig. 2. The surface texture of the panel must be better than 6,3 µm.

The instrument is shipped with rubber panel gasket (50 to 60 Sh).

To assure the IP65 and NEMA 4 protection, insert the panel gasket between the instrument and the panel as shown in fig. 1.

While holding the instrument against the panel proceed as follows:

- 1) insert the gasket in the instrument case;
- 2) insert the instrument in the panel cutout;
- 3) pushing the instrument against the panel, insert the mounting bracket;
- 4) with a screwdriver, turn the screws with a torque between 0.3 and 0.4 Nm.

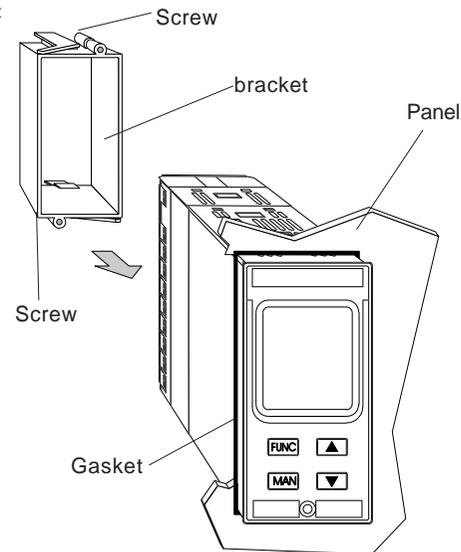


Fig. 1



OUTLINE AND CUT OUT DIMENSIONS

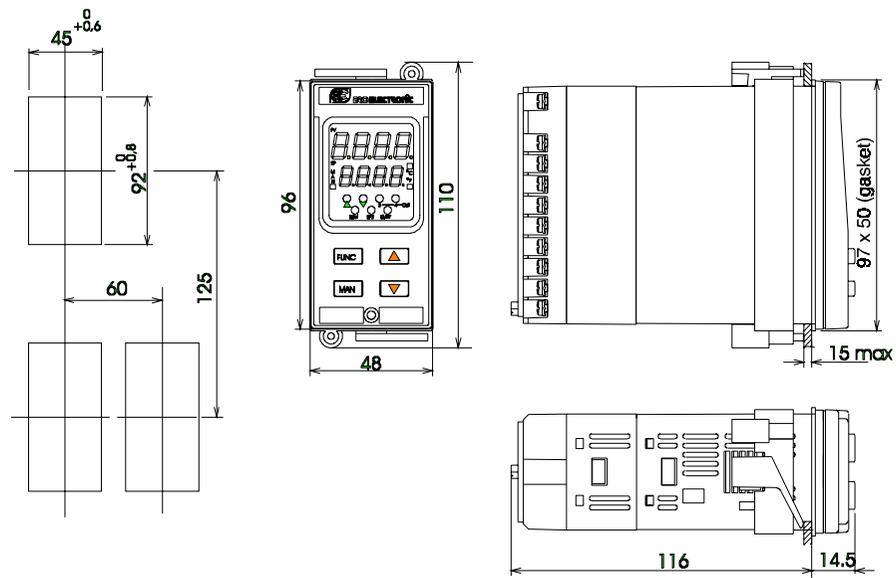


Fig. 2.A TFS - OUTLINE AND CUT-OUT DIMENSIONS

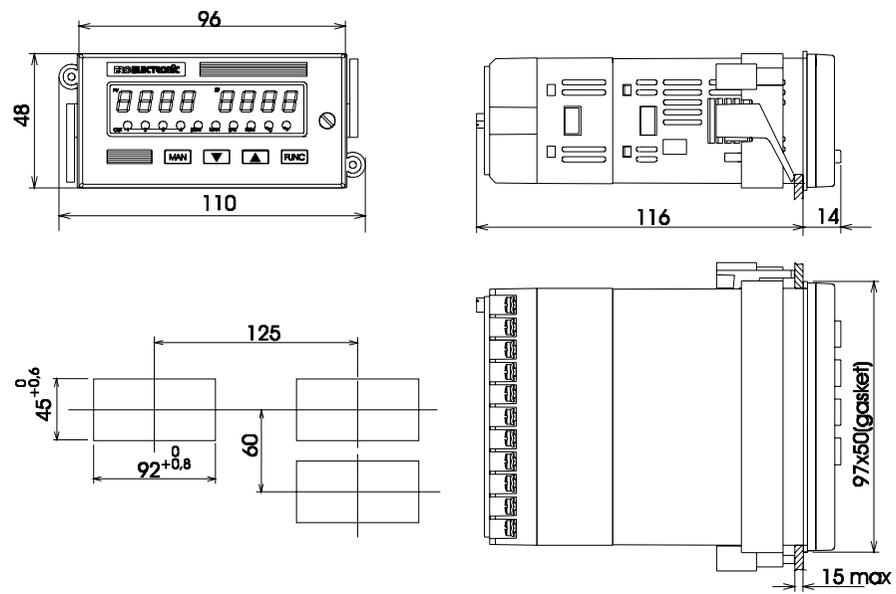


Fig. 2.B THS - OUTLINE AND CUT-OUT DIMENSIONS

CONNECTION DIAGRAMS

Connections are to be made with the instrument housing installed in its proper location.

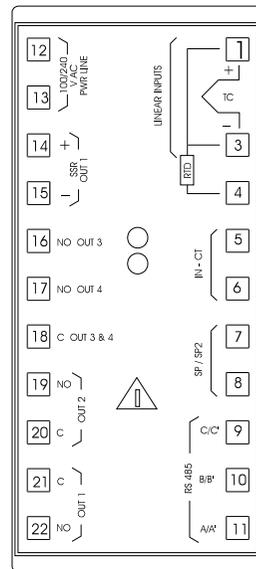


Fig. 3.A TFS - REAR TERMINAL BLOCK

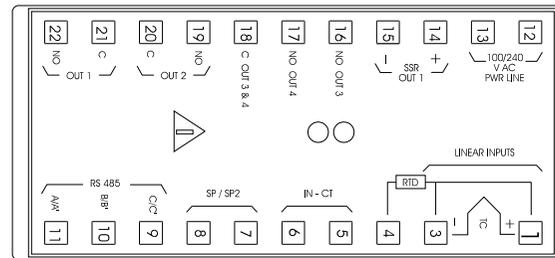


Fig. 3.B THS - REAR TERMINAL BLOCK

A) MEASURING INPUTS

NOTE: Any external components (like zener barriers etc.) connected between sensor and input terminals may cause errors in measurement due to excessive and/or not balanced line resistance or possible leakage currents.

TC INPUT

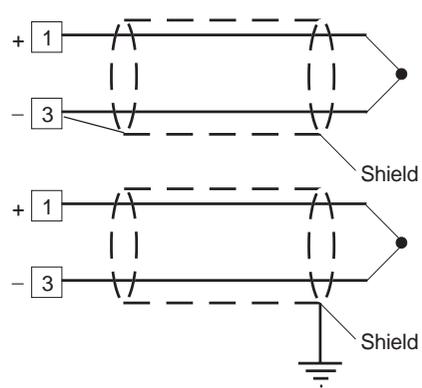


Fig. 4 THERMOCOUPLE INPUT WIRING

NOTE:

- 1) Don't run input wires together with power cables.
- 2) For TC wiring use proper compensating cable preferable shielded.
- 3) when a shielded cable is used, it should be connected at one point only.

RTD INPUT

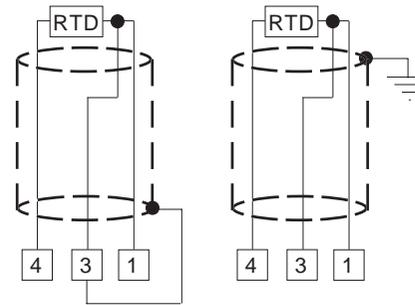


Fig. 5 RTD INPUT WIRING

NOTE:

- 1) Don't run input wires together with power cables.
- 2) Pay attention to the line resistance; a high line resistance may cause measurement errors.
- 3) When shielded cable is used, it should be grounded at one side only to avoid ground loop currents.
- 4) The resistance of the 3 wires must be the same.

LINEAR INPUT

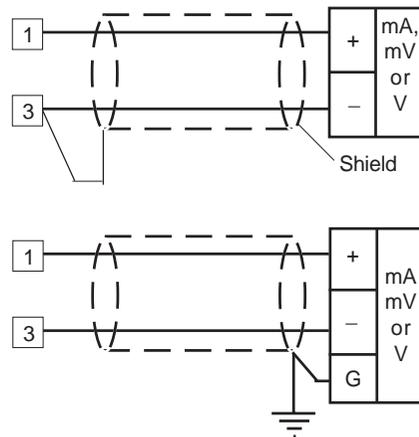


Fig. 6 mA, mV AND V INPUTS WIRING

NOTE:

- 1) Don't run input wires together with power cables.
- 2) Pay attention to the line resistance; a high line resistance may cause measurement errors.
- 3) When shielded cable is used, it should be grounded at one side only to avoid ground loop currents.
- 4) The input impedance is equal to:
 - < 5 Ω for 20 mA input
 - > 1 M Ω for 60 mV input
 - > 200 k Ω for 5 V input
 - > 400 k Ω for 10 V input

B) LOGIC INPUT

Safety note:

- 1) Do not run logic input wiring together with power cables.
- 2) Use an external dry contact capable of switching 0.5 mA, 5 V DC.
- 3) The instrument needs 100 ms to recognize a contact status variation.
- 4) The logic input is **NOT** isolated by the measuring input

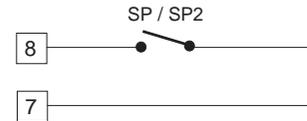


Fig. 7 - LOGIC INPUT WIRING

This logic input allows to select the operative set point.

logic input	op. set point
open	SP
close	SP2

CURRENT TRANSFORMER INPUT

This input allows to measure and display the current running in the load, driven by the OUTPUT 1, during the ON and the OFF period of the OUTPUT 1 cycle time.

By this features it is also available the "Out 1 failure detection" function (see page 22)

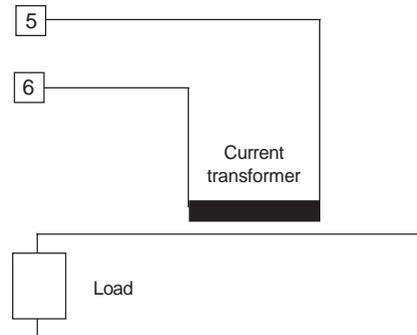


Fig. 8 CURRENT TRANSFORMER INPUT WIRING

Notes:

- 1) The input impedance is equal to 10 Ω .
- 2) The maximum input current is equal to 50 mA (50 / 60 Hz).
- 3) The minimum period (ON or OFF) to perform this measurement is equal to 400 ms.

Safety note:

- Do not run current transformer input wiring together with power cables.

C) RELAY OUTPUTS

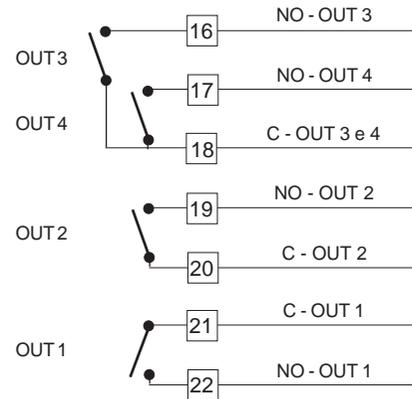


Fig. 9 RELAY OUTPUTS WIRING

The outputs 1 and 2 are protected by varistor against inductive load with inductive component up to 0.5 A.

The contact rating of the OUT 1 is 3A/250V AC resistive load.

The contact rating of the OUT 2, 3 and 4 is 2A/250V AC resistive load.

The number of operations is 1×10^5 at specified rating.

- NOTES**
- 1) To avoid electrical shock, connect power line at the end of the wiring procedure.
 - 2) For power connections use No 16 AWG or larger wires rated for at least 75 °C.
 - 3) Use copper conductors only.
 - 4) Don't run input wires together with power cables.

- 5) Relay output and SSR drive output are both available. When a relay output is desired it is necessary to enable the SSR output and viceversa (see chapter "Preliminary hardware settings").

The following recommendations avoid serious problems which may occur, when using relay output for driving inductive loads.

INDUCTIVE LOADS

High voltage transients may occur when switching inductive loads.

Through the internal contacts these transients may introduce disturbances which can affect the performance of the instrument.

The internal protection (for OUT 1 and OUT 2 only) assures a correct protection up to 0.5 A of inductive component by varistor.

The OUT 3 and OUT 4 protection can be made by connecting across their contacts an RC network chosen in the following table.

The same problem may occur when a switch is used in series with the internal contacts as shown in Fig. 10.

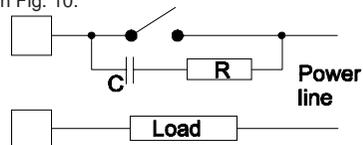


Fig. 10 EXTERNAL SWITCH IN SERIES WITH THE INTERNAL CONTACT

In this case it is recommended to install an additional RC network across the external contact as shown in Fig. 10.

The value of capacitor (C) and resistor (R) are shown in the following table.

LOAD (mA)	C (μF)	R (Ω)	P. (W)	OPERATING VOLTAGE
<40 mA	0.047	100	1/2	260 V AC
<150 mA	0.1	22	2	260 V AC
<0.5 A	0.33	47	2	260 V AC

Anyway the cable involved in relay output wiring must be as far away as possible from input or communication cables.

VOLTAGE OUTPUT FOR SSR DRIVE

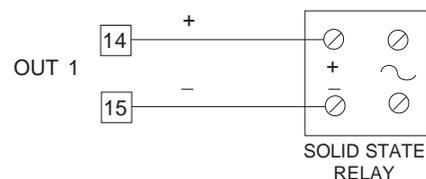


Fig. 11 SSR DRIVE OUTPUT WIRING

It is a time proportioning output.

Logic level 0: Vout < 0.5 V DC.

Logic level 1:

- 14 V ± 20 % @ 20 mA

- 24 V ± 20 % @ 1 mA.

Maximum current = 20 mA.

NOTES:

- 1) This output is not isolated. A double or reinforced isolation between instrument output and power supply must be assured by the external solid state relay.
- 2) Relay output and SSR drive output are both available. When a SSR output is desired it is necessary to enable the relay output and viceversa (see chapter "Preliminary hardware settings").

SERIAL INTERFACE

RS-485 interface allows to connect up to 30 devices with one remote master unit.

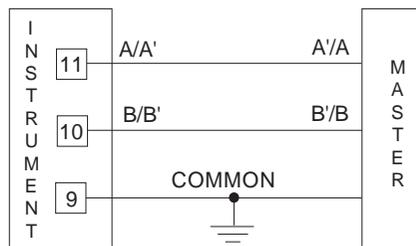


Fig. 12 - RS-485 WIRING

The cable length must not exceed 1.5 km at 9600 BAUD.

NOTES:

- 1) This is an RS485 isolated interface.
- 2) The following report describes the signal sense of the voltage appearing across the interconnection cable as defined by EIA for RS-485.
 - a) The " A " terminal of the generator shall be negative with respect to the " B " terminal for a binary 1 (MARK or OFF) state.
 - b) The " A " terminal of the generator shall be positive with respect to the " B " terminal for a binary 0 (SPACE or ON)

D) POWER LINE WIRING

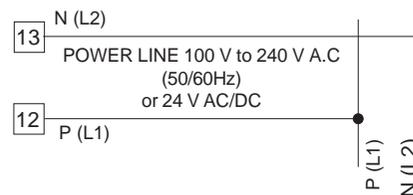


Fig. 13 POWER LINE WIRING

NOTE:

- 1) Before connecting the instrument to the power line, make sure that line voltage corresponds to the description on the identification label.
- 2) To avoid electrical shock, connect power line at the end of the wiring procedure.
- 3) For supply connections use No 16 AWG or larger wires rated for at least 75 °C.
- 4) Use copper conductors only.
- 5) Don't run input wires together with power cables.
- 6) For 24 V DC the polarity is a do not care condition.
- 7) The power supply input is **NOT** fuse protected. Please, provide it externally.

Power supply	Type	Current	Voltage
24 V AC/DC	T	500 mA	250 V
100/240 V AC	T	63 mA	250 V

When fuse is damaged, it is advisable to verify the power supply circuit, so that it is necessary to send back the instrument to your supplier.

- 8) The safety requirements for Permanently Connected Equipment say:



- a switch or circuit-breaker shall be included in the building installation;
- It shall be in close proximity to the equipment and within easy reach of the operator;
- it shall be marked as the disconnecting device for the equipment.

NOTE: a single switch or circuit-breaker can drive more than one instrument.

- 9) When a neutral line is present, connect it to terminal 13.



Nuovo-10

10



26/03/99, 12.33



PRELIMINARY HARDWARE SETTINGS

- 1) Remove the instrument from its case.
- 2) It is necessary to set J1 according to the desired input type as shown in the following figure.

INPUT TYPE	J1				
	1-2	3-4	5-6	7-8	9-10
TC-RTD	open	close	open	open	open
60 mV	open	close	open	open	open
5 V	close	open	close	open	open
10 V	open	open	close	open	open
20 mA	open	open	open	close	close

NOTE : the not used jumper can be positioned on pin 7-9

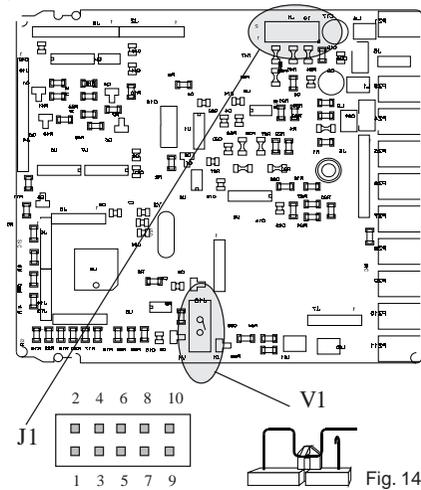


Fig. 14

OPEN INPUT CIRCUIT

This instrument is able to identify the open circuit for TC and RTD inputs.

The open input circuit condition for RTD input is shown by an "overrange" indication.

For TC input, it is possible to select overrange indication (standard) or underrange indication setting the CH2 and SH2 according to the following table:

Overrange (STD)	CH2 = close	SH2 = open
Underrange	CH2 = open	SH2 = close

Both pads are located on the soldering side of the CPU card

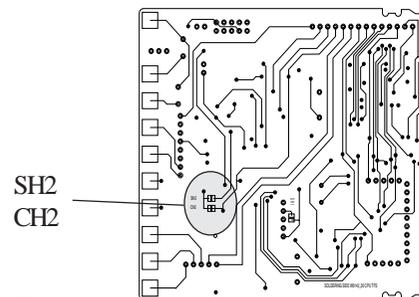


Fig. 15

SELECTION OF THE OUT 1 TYPE

The output 1 can be set, by J303, as SSR output (1 - 2) or relay output (2 - 3).

When the relay output is selected, by J302 it is possible to select the contact used (N.O. = 1-2 or N.C = 2-3) as shown below:

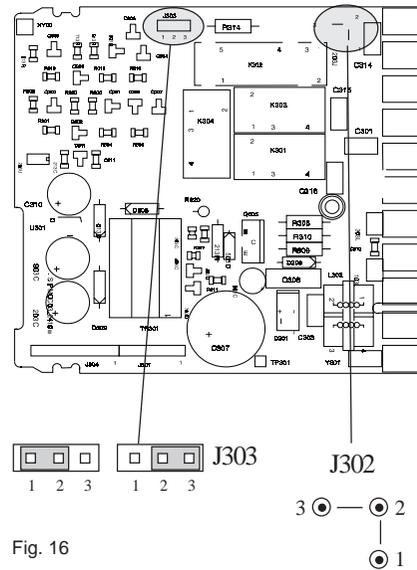


Fig. 16

GENERAL NOTES for configuration.

- FUNC = This will memorize the new value of the selected parameter and go to the next parameter (increasing order).
- MAN = This will scroll back the parameters without memorization of the new value.
- ▲ = This will increase the value of the selected parameter
- ▼ = This will decrease the value of the selected parameter.

CONFIGURATION PROCEDURE

- 1) Remove the instrument from its case.
 - 2) Set the dip switch V1 to the open condition (see fig. 14).
 - 3) Re-insert the instrument.
 - 4) Switch on the instrument.
- The display will show CONf.



NOTE : If "CAL" indication is displayed, press immediately the ▲ pushbutton and return to the configuration procedure.

- 5) Push the FUNC pushbutton.

SEr1 = Serial interface protocol

- OFF = No serial interface
- Ero = Polling/selecting ERO
- nbUS = Modbus
- jbUS = Jbus

SEr2 = Serial link device address

Not available when SEr1 = OFF

From 1 to 95 for ERO protocol

From 1 to 255 for all the other protocols

NOTE: the electrical characteristic of the RS 485 serial interface will allow the connection of 31 devices maximum.

SEr3 = Baud rate for serial link

Not available when SEr1 = OFF

From 600 to 19200 baud.

NOTE: 19200 baud is shown on display as 19.2.

SEr4 = Byte format for serial link

Not available when SEr1 = OFF

7E = 7 bits + even parity (For ERO protocol only)

7O = 7 bits + odd parity (For ERO protocol only)

8E = 8 bits + even parity

8O = 8 bits + odd parity

8 = 8 bits without parity

P1 - Input type and standard range

0 = TC type L range 0 / +400.0 °C

1 = TC type L range 0 / +900 °C

2 = TC type J range -100.0 / +400.0 °C

3 = TC type J range -100 / +1000 °C

4 = TC type K range -100.0 / +400.0 °C

5 = TC type K range -100 / +1370 °C

6 = TC type N range -100 / +1400 °C

7 = TC type R range 0 / +1760 °C

8 = TC type S range 0 / +1760 °C

9 = RTD type Pt 100 range -199.9 / +400.0 °C

10 = RTD type Pt 100 range -200 / +800 °C

11 = mV Linear range 0 / 60 mV

12 = mV Linear range 12 / 60 mV

13 = mA Linear range 0 / 20 mA

14 = mA Linear range 4 / 20 mA

15 = V Linear range 0 / 5 V

16 = V Linear range 1 / 5 V

17 = V Linear range 0 / 10 V

18 = V Linear range 2 / 10 V

19 = TC type L range 0 / +1650 °F

20 = TC type J range -150 / +1830 °F

21 = TC type K range -150 / +2500 °F

22 = TC type N range -150 / +2550 °F

23 = TC type R range 0 / +3200 °F

24 = TC type S range 0 / +3200 °F

25 = RTD type Pt 100 range -199.9 / +400.0 °F

26 = RTD type Pt 100 range -330 / +1470 °F

27 = TC type T range -199.9 / 400.0 °C

28 = TC type T range -330 / 750 °F

NOTE: selecting P1 = 0, 2, 4, 9, 25 or 27, the instrument set automatically P40 = FLtr. For all the remaining ranges it will set P40 = nOFL.

P2 = Decimal point position

This parameter is available only when a linear input is selected (P1 = 11 to 18).

----. = No decimal figure.

----. = One decimal figure.

---. = Two decimal figures.

-. = Three decimal figures.

P3 = Initial scale value

For linear inputs it is programmable from -1999 to 4000.

For TC and RTD input it is programmable within the input range.

When this parameter is modified, rL parameter will be re-aligned to it.

P4 = Full scale value

For linear inputs it is programmable from -1999 to 4000.

For TC and RTD inputs, it is programmable within the input range.

When this parameter is modified, rH parameter will be re-aligned to it.

The initial and full scale values determine the input span which is used by the PID algorithm, the SMART and the alarm functions.

NOTE: the minimum input span ($S = P4 - P3$), in absolute value, should be set as follows:

- For linear inputs, $S \geq 100$ units.
- For TC input with °C readout, $S \geq 300$ °C.
- For TC input with °F readout, $S \geq 550$ °F.
- For RTD input with °C readout, $S \geq 100$ °C.
- For RTD input with °F readout, $S \geq 200$ °F.

P5 = Output 1 type

Changing the value of P5 parameter, also Cy1 parameter will be automatically modified.

rEL = Relay


[the cycle time (Cy1) will be forced to 15 s]

SSr = SSR

[the cycle time (Cy1) will be forced to 4 s]

P6 = Output 1 action.

This parameter is skipped if P7 = 4
 rEV = Reverse action (Heating action)
 dir = Direct action (Cooling action)

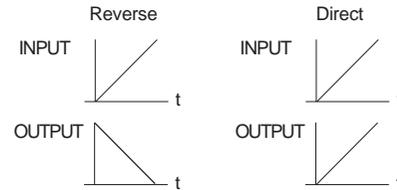

P7 = Output 2 function.

0 = output not used.
 1 = it is used as Alarm 1 output and the alarm 1 is programmed as process alarm.
 2 = it is used as Alarm 1 output and the alarm 1

is programmed as band alarm.
 3 = it is used as Alarm 1 output and the alarm 1 is programmed as deviation alarm.
 4 = it is used as second control output (Cooling output).

NOTE: setting P7 = 4, the P6 parameter is forced to "rEV".

P8 = Cooling media.

Available only when P7 = 4

- Alr = Air is used as cooling media.
- OIL = Oil is used as cooling media.
- H2O = Direct water is used as cooling media.

Changing P8 parameter, the instrument forces the cycle time and relative cooling gain parameter to the default value related with the chosen cooling media

When	P8 = Alr	- Cy2 = 10 s and rC = 1.00
	P8 = OIL	- Cy2 = 4 s and rC = 0.80
	P8 = H2O	- Cy2 = 2 and rC = 0.40

P9 = Alarm 1 operating mode

Available only when P7 is equal to 1,2 or 3.
 H.A. = High alarm (outside for band alarm) with automatic reset.
 L.A. = Low alarm (inside for band alarm) with automatic reset.
 H.L. = High alarm (outside for band alarm) with manual reset (latched alarm).
 L.L. = low alarm (inside for band alarm) with manual reset (latched alarm).

P10 = Current measurement (in Amp.)

(See also "Display function" and "Out 1 failure detection").
 OFF = Current measurement disabled
 n.O. = Set P10 to n.O. when the load is energized during the ON status of the instrument out-

put (relay energized or SSR output status 1).
n.C. = Set P10 to n.C. when the load is energized during the OFF status of the instrument output (relay de-energized or SSR output status 0).

P11 = Current transformer range

This parameter is present only if P10 is different from OFF and it is programmable from 10 to 100 A.

P12 = Output 3 function

- 0 = Output not used for alarm 2.
- 1 = it is used as Alarm 2 output and the alarm 2 is programmed as process alarm.
- 2 = it is used as Alarm 2 output and the alarm 2 is programmed as band alarm.
- 3 = it is used as Alarm 2 output and the alarm 2 is programmed as deviation alarm.

NOTE : The output 3 relay operates as a logic OR between the alarm 2 and the "Out 1 failure detection" function.

P13 = Alarm 2 operating mode & "Output 1 failure detection" reset

Available only when P12 is different from 0 or P10 is equal to n.O or n.C.

- H.A. = High alarm (outside for band alarm) with automatic reset.
- L.A. = Low alarm (inside for band alarm) with automatic reset.
- H.L. = High alarm (outside band) with manual reset (latched alarm).
- L.L. = low alarm (inside band) with manual reset (latched alarm).

NOTE: The "Out 1 failure detection" function assumes only the selected reset type (manual or automatic).

P14 = Output 4 function

- 0 = Output not used.
- 1 = it is used as Alarm 3 output and the alarm 3 is programmed as process alarm.
- 2 = it is used as Alarm 3 output and the alarm 3 is programmed as band alarm.
- 3 = it is used as Alarm 3 output and the alarm 3 is programmed as deviation alarm.

P15 = Alarm 3 operative mode

Available only when P14 is different from 0.

- H.A. = High alarm (outside for band alarm) with automatic reset.
- L.A. = Low alarm (inside for band alarm) with automatic reset.
- H.L. = High alarm (outside band) with manual reset (latched alarm).
- L.L. = low alarm (inside band) with manual reset (latched alarm).

P16 = Programmability of the alarm 3.

Available only when P14 is different from 0.

- OPrt = Alarm 3 threshold and hysteresis are programmable in operating mode.
- COnF = Alarm 3 threshold and hysteresis are programmable in configuration mode.

P17 = Alarm 3 threshold value

Available only when P14 is different from 0 and P16 is equal to "COnF".

Range:

- For process alarm - within the span limits (P4 - P3)
- For band alarm - from 0 to 500 units.
- For deviation alarm - from -500 to 500 units.

P18 = Alarm 3 hysteresis value

Available only when P14 is different from 0 and P16 is equal to "CO nF".

Range: from 0.1% to 10.0 % of the span (P4 - P3)

P19=Threshold of the "Soft Start" function.

Threshold value, in eng. units, to initiate the "Soft start" function (output power limiting) at start up.

Range : within the readout span.

NOTE: this threshold value will not be taken into account when tOL = InF.

P20 = Safety lock

0 = No parameter protection. The device is always in unlock condition and all parameters can be modified.

1 = The device is always in lock condition and no one of the parameters (exception made for set points [SP, SP2] and alarm manual reset) can be modified (for SMART status see P31 parameter).

From 2 to 4999 = This combination number is a secret value to be used, in run time (see nnn parameter) to put device in lock/unlock condition.

For SP, SP2 and manual reset of the alarms, the lock/unlock condition has no effect (for SMART status see P31).

From 5000 to 9999 = This combination number is a secret value to be used, in run time (see nnn parameter) to put device in lock/unlock condition.

For SP, SP2, manual reset of the alarm, AL1, AL2, AL3, Hbd and SCA, the lock/unlock condition has no effect (for SMART status see P31).

NOTE: when safety lock is selected, the secret value can not be displayed again and the display will show 0, 1, SFt.A (when P20 is

encompassed between 2 and 4999) or SFt.b (when P20 is encompassed between 5000 and 9999)

The configuration procedure is completed and the instrument shows " " on both displays.

When it is desired to end the configuration procedure push the FUNC pushbutton; the display will show "CO nF".

When it is desired to access to the advanced configuration parameter proceed as follows:

- 1) using ▲ and ▼ pushbutton set the 233 code.
- 2) push the FUNC pushbutton.

P21 = Alarm 1 action

Available only when P7 is different from 0 or 4.

dir = direct action (relay energized in alarm condition)

rEV = reverse action (relay de-energized in alarm condition)

P22 = Alarm 1 stand-by function (mask)

Available only when P7 is different from 0 or 4.

OFF = stand-by function (mask alarm) disabled

On = stand-by function (mask alarm) enabled

NOTE: If the alarm is programmed as band or deviation alarm, this function masks the alarm condition after a set point change or at the instrument start-up until process variable reaches the alarm threshold plus or minus hysteresis. If the alarm is programmed as a process alarm, this function masks the alarm condition at instrument start-up until the process variable reaches the alarm threshold plus or minus hysteresis.

P23 = action of the Alarm 2 and "Out 1 failure detection" function

Available only when P12 is different from 0 or P10 is different from "OFF".

dir = direct (relay energized in alarm condition)

rEV = reverse (relay de-energized in alarm condition)

P24 = Alarm 2 stand-by function (mask alarm)

Available only when P12 is different from 0.

OFF = stand-by function (mask alarm) disabled

On = stand-by function (mask alarm) enabled

P25 = Alarm 3 action

Available only when P14 is different from 0.

dir = direct (relay energized in alarm condition)

rEV = reverse (relay de-energized in alarm condition)

P26 = Alarm 3 stand-by function (mask alarm)

Available only when P14 is different from 0.


OFF = stand-by function (mask alarm) disabled

On = stand-by function (mask alarm) enabled

P27 = OFFSET applied to the measured value

It allows to set a constant OFFSET throughout the readout range. It is skipped for linear inputs

- For readout ranges with decimal figure, P27 is programmable from -19.9 to 19.9.
- For readout ranges without decimal figure, P27 is programmable from -199 to 199.

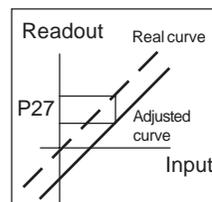

P28 = NOT AVAILABLE

P29 = Displayable protected parameters

This parameter is skipped when P20 = 0.

OFF = Protected parameters cannot be displayed.

On = Protected parameter can be displayed.

P30 = MANUAL function

OFF = manual function is disabled

On = manual function can be enabled/
disabled by MAN pushbutton.

P31= SMART function

0 = SMART function disabled.

1 = SMART function in NOT protected by safety lock.

2 = SMART function is under safety lock protection.

P32 = Relative cooling gain calculated by SMART function.

This parameter is available only when P7 = 4 and P31 is different from 0.

OFF = SMART algorithm does not calculate the rC parameter value

On = SMART algorithm calculates the rC parameter value.

P33 = Maximum value of the proportional band calculated by the SMART algorithm.

This parameter is skipped if P31=0.
It is programmable from P34 or P35 value to 100.0 %.

P34 = Minimum value of the proportional band calculated by the SMART algorithm when the instrument has two control outputs.

This parameter available only when P7 = 4 and P31 is different from 0.
It is programmable from 1.5% to P33 value.

P35 = Minimum value of the proportional band calculated by the SMART algorithm when the instrument has one control output.

This parameter is skipped if P7 = 4 or P31=0.
It is programmable from 1.0 % to P33 value.

P36 = Minimum value of the integral time calculated by the SMART algorithm.

This parameter is skipped if P31=0.
It is programmable from 1 second (00.01) to 2 minutes (2.00).

P37 = Device status at instrument start up.

This parameter is skipped when P30 = OFF.
0 = the instrument starts in AUTO mode.
1 = It starts in the same way it was prior to the power shut down. If the instrument was in manual mode, the power output will be set to 0.

P38 = NOT AVAILABLE

P39 = Timeout selection

This parameter allows to set the time duration of the timeout for parameter setting used by the instrument during the operating mode.

tn 10 = 10 seconds
tn 30 = 30 seconds

P40 = Digital filter on the displayed value

It is possible to apply to the displayed value a digital filter of the first order with a time constant equal to:- 4 s for TC and RTD inputs

- 2 s for linear inputs

noFL. = no filter

FLtr = filter enabled

P41 = Conditions for output safety value

0 = No safety value (see "Error Messages")

1 = Safety value applied when overrange or underrange condition is detected.

2 = Safety value applied when overrange condition is detected.

3 = Safety value applied when underrange condition is detected.

P42 = Output safety value

This parameter is skipped when P41 = 0

This value can be set

- from 0 to 100 % when P7 is different from 4

- from -100 % to 100 % when P7 is equal to 4

P43 = Extension of the anti-reset-wind up

Range: from -30 to +30 % of the proportional band.

NOTE: a positive value increases the high limit of the anti-reset-wind up (over set point) while a negative value decreases the low limit of the anti-reset-wind up (under set point).

P44 = Control action type

Pid - the instrument operates with a PID algorithm.

Pi - the instrument operates with a PI algorithm.

P45 = Set point indication

Fn.SP = during operative mode, when the instrument performs a ramp, it will show the final set point value.

OP.SP = during operative mode, when the instrument performs a ramp, it will show the operative set point.

P46= Operative set point alignment at instrument start up.

0 = At start up, the operative set point will be aligned to SP or SP2 according to the status of the logic input.

1 = At start up, the operative set point will be aligned to the measured value and then it will reach the selected set point with a programmable ramp (see Grd1 and Grd2 operative parameters).

NOTE: if the instrument detects an out of range or an error condition on the measured value it will ever operate as described for P46 = 0.

The configuration procedure is terminated and the display returns to show "COntF".

OPERATIVE MODE

- 1) Remove the instrument from its case.
- 2) Set the internal dip switch V1 in closed condition
- 3) Re-insert the instrument.
- 4) Switch on the instrument.

DISPLAY FUNCTION

The upper (or left) display shows the measured values while the lower (or right) display shows the programmed set point value (we define the above condition as "normal display mode").

Note: When the rate of change (Grd1, Grd2) is utilized, the displayed set point value may be different from the operating set point.

It is possible to change the information on the lower (right) display as follows:

- Push the FUNC pushbutton for more than 3 s but less than 10 s. The lower display (for TFS) or the right display (for THS) will show " A. " followed by the current consumed by the load (driven by the OUT 1) when the load is in ON condition (see also "OUT 1 failure detection").
- Push "FUNC" pushbutton again. The lower display (for TFS) or the right display (for THS) will show " b. " followed by the leakage current running in the load (driven by the OUT 1) when the load is in OFF condition (see also "OUT 1 failure detection").
- Push "FUNC" pushbutton again. The lower display (for TFS) or the right display (for THS) will show " H. " followed by OUT 1 power value (from 0 to 100%).
- Push FUNC pushbutton again. The lower display (for TFS) or the right display (for THS) will show " C. " followed by OUT 2 power value (from 0 to 100%).
- Push FUNC pushbutton again. The display will return in "Normal Display Mode".

NOTE: The "A.", "b" and " H. " informations will be displayed only if the relative function has been previously configured.

When no pushbutton are pressed during the time out (see P39), the display will automatically return in "Normal Display Mode".

In order to keep continuously the desired information on the lower display, depress "▲" or "▼" push- buttons to remove the timeout.

When is desired to return in "Normal Display Mode" push FUNC push-button again.

INDICATORS

- °C Lit when the process variable is shown in Celsius degree.
- °F Lit when the process variable is shown in Fahrenheit degree.
- SMRT Flashing when the first part of the SMART algorithm is active.
Lit when the second part of the SMART algorithm is active.
- OUT1 Lit when the OUT 1 is in ON condition.
- OUT2 Lit when OUT 2 is ON or alarm 1 is in the alarm state.
- OUT3 Lit when the alarm 2 is in the alarm state.
Flashing with slow rate when the "Out 1 failure detection" is in alarm state.
Flashing with high rate when the "Out 1 failure detection" and alarm 2 are in alarm state.
- OUT4 Lit when the alarm 3 is in alarm condition.
- REM Lit when the instrument is in REMOTE condition (functions and parameters are controlled via serial link).
- SP2 Lit when SP2 is used.
Flashes when a set point from serial link is used.
- MAN Lit when the instrument is in MANUAL mode.

Pushbutton functionality during operating mode.

FUNC = when the instrument is in "normal display mode"

- 1) with a brief pressure (<3 s) it starts the parameter modification procedure.
- 2) with a pressure higher than 3 s but lower than 10s, it changes the indication on the lower (right) display (see "display function").
- 3) with a pressure higher than 10 s, it enables the "Lamp test" (see "Lamp test")

During parameter modification, it allows to memorize the new value of the selected parameter and go to the next parameter (increasing order).

MAN = when the instrument is in "normal display mode", pushing MAN pushbutton for more than 1 s, it is possible to enable or disable the manual function.

During parameter modification, it allows to scroll back the parameters without memorizing the new setting.

▲ = During parameter modification, it allows to increase the value of the selected parameter

During MANUAL mode, it allows to increase the output value.

▼ = During parameter modification, it allows to decrease the value of the selected parameter

During MANUAL mode, it allows to decrease the output value.

▲+MAN = During parameter modification they allow to jump to the maximum programmable value.

▼+MAN = During parameter modification they allow to jump to the minimum programmable value.

NOTE: a 10 or 30 seconds time out (see P 39) can be selected for parameter modification during run time mode.

If, during operative parameter modification, no pushbuttons are pressed for more than 10 (30) seconds, the instrument goes automatically to the "normal display mode" and the eventual modification of the last parameter will be lost.

ENABLE/DISABLE THE CONTROL OUTPUT

When the instrument is in "normal display mode", by keeping depressed for more than 5 s the ▲ and FUNC pushbuttons, it is possible to disable the control outputs. In this open loop mode the device will function as an indicator, the lower display will show the word OFF and all control outputs will be in the OFF state.

When the control outputs are disabled the alarms are also in non alarm condition.

The alarms output conditions depend on the alarm action type (see P21-P23-P25).

Depress for more than 5 s the ▲ and FUNC pushbuttons to restore the control status.

The alarm stand-by function, if configured, will be activated as per power up.

If a shut down occurs when the control output is disabled, at instrument power up the control output will be disabled again.

OUT 1 FAILURE DETECTION FUNCTION

The device is capable (for the load driven by the OUT 1) to measure and display:

- the current running in the load when the load is energized
- the leakage current, flowing through the load, when the load is de-energized.

If the P10 parameter has been correctly set, the instrument generates an alarm when:

- the current running in the load is lower than the "Hbd" parameter value (It shows a partial or total break down of the load, the break down of the actuator or a power down due to a protection or a fuse intervention);
- the leakage current is higher than the "SCA" parameter value (It shows a short circuit of the actuator).

The "Display function" paragraph describes how to show the two current values.

A fault condition is shown by OUT 3 LED flashing and by OUT 3 relay status.

If the ON or OFF period is lower than 400 ms the relative measurement couldn't be performed and the instrument will show flashing the last measured value.

MANUAL FUNCTION

It is possible to enter in MANUAL mode (only if enabled by P30=On) by depressing the MAN pushbutton for more than 1 sec.

The command is accepted and executed only if the display is in "Normal Display Mode".

When in MANUAL mode the LED's MAN annunciator light up while the lower display shows the power output values.

The value of OUT 1 is shown in the two most significant digit field while the value of OUT 2 (if present) is shown in the two less significant digit field.

The decimal point between the two values will be flashing to indicate instrument in MANUAL mode.

Note:

- A graphic symbol "  " is used for OUT1 = 100
- A graphic symbol "  " is used for OUT2 = 100

The power output can be modified by using  and  pushbuttons.

By depressing, for more than 2 seconds, MAN again the device returns in AUTO mode.

The transfer from AUTO to MANUAL and viceversa is bumpless (this function is not provided if integral action is excluded).

If transfer from AUTO to MANUAL is performed during the first part of SMART algorithm (TUNE) when returning in AUTO the device will be forced automatically to the second part of the SMART algorithm (ADAPTIVE).

At power up the device will be in the AUTO mode or as it was left prior to power shut down depending on P37 configuration selection.

Note: When start up occurs in Manual mode the power output (OUT1 - OUT2) is set to 0.

DIRECT ACCESS TO SET POINT

When the device is in AUTO mode and in "Normal Display Mode", it is possible to access directly to set point modification (SP or SP2). Pushing ▲ or ▼ for more than 2 s, the set point will begin changing.

The new setpoint value becomes operative since no pushbutton has been depressed at the end of 2 s timeout.

SP/SP2 SELECTION

It is possible to select the operating set point (SP or SP2) only by an external contact (terminals 7 and 8). By setting P45, it is possible to display the final or the operative set point during a ramp execution.

SERIAL LINK

The device can be connected to a host computer by a serial link.

The host can put the device in LOCAL (functions and parameters are controlled via keyboard) or in REMOTE (functions and parameters are controlled via serial link) mode.

The REMOTE status is signalled by a LED labelled REM.

This instrument allows to modify the operative and configuration parameters via serial link..

The necessary conditions to implement this function are the following:

- 1) Serial parameters from SEr1 to SEr4 should be properly configured.
- 2) Device must be in the OPERATING mode
During the downloading of configuration the device goes in open loop with all output in OFF state.

At the end of configuration procedure, the device performs an automatic reset and then returns to close loop control.

SMART function

It is used to optimize automatically the control action.

At instrument power up, if the SMART is ON, the second algorithm will be enabled.

To enable the SMART function, push the FUNC pushbutton until "Snrt" parameter is shown.

Pushing ▲ or ▼ set the display "On" and push the FUNC pushbutton.

The SMRT LED will turn on or flashing according to the selected algorithm.

When the smart function is enabled, it is possible to display but not to modify the control parameters (Pb, ti, td, and rC).

To disable the SMART function, push the FUNC pushbutton again until "Snrt" parameter is shown.

Pushing ▲ or ▼ set the display "OFF" and push the FUNC pushbutton. The SMRT LED will turn OFF.

The instrument will maintain the actual set of control parameter and will enabled parameter modification.

- NOTES:**
- 1) When ON/OFF control is programmed (Pb=0), the SMART function is disabled.
 - 2) The SMART enabling/disabling can be protected by safety key. (see P31).

LAMP TEST

When it is desired to verify the display efficiency, push FUNC pushbutton for more than 10 s. The instrument will turn ON, with a 50 % duty cycle, all the LEDs of the display (we define this function "LAMP TEST").

No time out is applied to the LAMP TEST.

When it is desired to come back to the normal display mode, push FUNC pushbutton again.

During the lamp test the instrument continues to control the process but no keyboard function is available (exception made for FUNC pushbutton).

OPERATIVE PARAMETERS

Push the FUNC pushbutton, the lower display will show the code while the upper display will show the value or the status (On or OFF) of the selected parameter.

By ▲ or ▼ pushbutton it is possible to set the desired value or the desired status.

Pushing the FUNC pushbutton, the instrument memorizes the new value (or the new status) and goes to the next parameter.

Some of the following parameter may be skipped according to the instrument configuration.

Param. DESCRIPTION

SP **Set point** (in eng. units).
Range: from rL to rH.
SP is operative when the logic input is open.

Snrt **SMART status.**
The On or OFF indication shows the actual status of the SMART function (enabled or disabled respectively).
Set On to enable the SMART function.
Set OFF to disable the SMART function.

n.rSt **Manual reset of the alarms.**

This parameter is skipped if none of the alarms have the manual reset function.
Set On and push FUNC to reset the alarms.

SP2 **Set point 2** (in eng. units).

Range: from rL to rH.

SP2 is operative when the logic input is close.

nnn **Software key for parameter protection.**

This parameter is skipped if P20 = 0 or 1
On = the instrument is in LOCK condition

OFF = the instrument is in UNLOCK condition

When it is desired to switch from LOCK to UNLOCK condition, set a value equal to P20 parameter.

When it is desired to switch from UNLOCK to LOCK condition, set a value different from P20 parameter.

AL1 **Alarm 1 threshold**

This parameter is available only if P 7 is equal to 1, 2 or 3.

Ranges:

- Span limits for process alarm.

- From 0 to 500 units for band alarm.

- From -500 to 500 units for deviation alarm.

HSA1 **Alarm 1 hysteresis**

This parameter is available only if P 7 is equal to 1, 2 or 3.

Range: From 0.1% to 10.0% of the input span or 1 LSD.

Note: If the hysteresis of a band alarm is larger than the alarm band, the instrument will use an hysteresis value equal to the programmed band minus 1 digit.

AL2 **Alarm 2 threshold**

This parameter is available only if P 12 is equal to 1, 2 or 3.

For other details see AL1 parameter.

HSA2 **Alarm 2 hysteresis**

This parameter is available only if P 12 is equal to 1, 2 or 3.

For other details see HSA1 parameter.

AL3 **Alarm 3 threshold**

This parameter is available only if P 14 is equal to 1, 2 or 3 and P16 = OPrt.

For range details see AL1 parameter.

HSA3 **Alarm 3 hysteresis**

This parameter is available only if P 14 is equal to 1, 2 or 3 and P16 = OPrt.

For other details see HSA1 parameter.

Pb **Proportional band**

Range:

- From 1.0% to 100.0% of the input span when P 7 is different from 4.

- From 1.5% to 100.0% of the input span when P 7 is equal to 4.

When Pb parameter is set to 0, the control action becomes ON/OFF.

Note: When device is working with SMART algorithm the Pb value will be limited by P33 and P35 parameters (when P7 is different from 4) or P33 and P34 parameters (when P7 is equal to 4)

HyS **Hysteresis for ON/OFF control action**

This parameter is available only when Pb=0.

Range: from 0.1% to 10.0% of the input span.

ti **Integral time**

This parameter is skipped if Pb=0 (ON/OFF action).

Range: from 00.01 to 20.00 [mm.ss].

Above this value the display blanks and

integral action is excluded

Note: When the device is working with SMART algorithm, the minimum value of the integral time will be limited by P36 parameter.

td **Derivative time**

This parameter is skipped if Pb=0 (ON/OFF action) or P44 = Pi.

Range: From 00.00 to 10.00 mm.ss.

Note: When device is working with SMART algorithm the td value will be equal to a quarter of Ti value.

IP **Integral pre-load.**

This parameter is skipped if Pb=0 (ON/OFF action).

- For one control output, it is programmable from 0 to 100 % of the output span.

- For two control outputs it is programmable from -100% (100 % cooling) to 100 % (100 % heating)

Cy1 **Output 1 cycle time**

Range: From 1 to 200 s.

Cy2 **Output 2 cycle time**

This parameter is available only if P7 is equal to 4.

Range: From 1 to 200 s.

rC **Relative Cooling gain.**

This parameter is skipped if Pb=0 (ON/OFF action) or P7 different from 4.

Range: from 0.20 to 1.00

Note: When the device is working with SMART algorithm and P32 is set to ON the RCG value is limited in accordance with the selected type of cooling media:

- from 0.85 to 1.00 when P8 = Alr

- from 0.80 to 0.90 when P8 = OIL

- from 0.30 to 0.60 when P8 = H2O

OLAP **Dead band/Overlap between H/C outputs.**

This parameter is skipped if Pb=0 (ON/OFF action) or P7 different from 4.
Range: from -20 to 50 % of the proportional band.

A negative OLAP value shows a dead band while a positive value shows an overlap.

rL **Set point low limit**

Range: from min. range value (P3) to rH.

Note: When P3 has been modified, rL will be realigned to it

rH **Set point high limit**

Range: From rL to full scale value (P4)

Note: When P4 has been modified, rH will be realigned to it

Grd1 **Ramp applied to an increasing set point change**

Range: from 1 to 100 digits per minutes. Above this value the display shows "Inf" meaning that the transfer will be done as a step change.

Grd2 **Ramp applied to a decreasing set point changes**

For other details see Grd1 parameter.

OLH **Output high limit**

Range:

- From 0.0 to 100.0 % when device is configured with one control output.

- From -100.0 to 100.0% when device is configured with two control outputs.

tOL **Time duration of the output power limiter (Soft start)**

Range: from 1 to 540 min. Above this value the display shows "Inf" meaning that the limiting action is always on

Note: The tOL can be modified but the new value will become operative only at the next instrument start up.

Hbd **Threshold value for out 1 break down alarm**

This parameter is skipped if P10=OFF.
Range: From 0 to Full scale value (see P11).

Function: see "Out 1 failure detection".

Note: The threshold resolution will be equal to 0.1 A for range up to 20 A and 1 A for range up to 100 A.

The hysteresis of this alarm is fixed to 1% of fsv

SCA **Threshold value for OUT 1 short circuit alarm.**

This parameter is skipped if P10=OFF.
Range: From 0 to Full scale value (see P11).

Function: see "Out 1 failure detection".

Note: The threshold resolution will be equal to 0.1 A for range up to 20 A and 1 A for range up to 100 A.

The hysteresis of this alarm is fixed to 1% of fsv

rnP **Control output maximum rate of rise**

It is programmable from 1% to 25% of the output per second.

Above the 25%/s, the display will show "Inf" meaning that no ramp is imposed.

ERROR MESSAGES

OVERRANGE, UNDERRANGE AND SENSOR LEADS BREAK INDICATIONS

The device is capable to detect a fault on the process variable (OVERRANGE or UNDERRANGE or SENSOR LEADS BREAK).

When the process variable exceeds the span limits established by configuration parameter P 1 an OVERRANGE condition will be shown on display as in the following figure:



An UNDERRANGE condition will be shown on display as in the following figure:



When P41 is different from zero and an out of range condition is detected, the instrument operates in accordance with P41 and P42 parameters.

When P41 is equal to 0 the following conditions may occur:

- The instrument is set for one output only and an OVERRANGE is detected, the OUT 1 turns OFF (if reverse action) or ON (if direct action).
- The instrument is set for heating/cooling action and an OVERRANGE is detected, OUT 1 turns OFF and OUT 3 turns ON.

- The instrument is set for one output only and an UNDERRANGE is detected, the OUT 1 turns ON (if reverse action) or OFF (if direct action).
- The instrument is set for heating/cooling action and an UNDERRANGE is detected, OUT 1 turns ON and OUT 3 turns OFF.

The sensor leads break can be signalled as:

- for TC/mV input : OVERRANGE or UNDERRANGE selected by a solder jumper
- for RTD input : OVERRANGE
- for mA/V input : UNDERRANGE

Note: On the mA/V input the leads break can be detected only when the range selected has a zero elevation (4/20 mA or 1/5 V or 2/10 V)
On RTD input a special test is provided to signal OVERRANGE when input resistance is less than 15 ohm (Short circuit sensor detection).

ERROR MESSAGES

The instrument performs same self-diagnostic algorithm.

When an error is detected, the instrument shows on the lower (right for THS) display the "Err" indication, while the upper (left for THS) display shows the code of the detected error.

ERROR LIST

SEr	Serial interface parameter error.
100	Write EEPROM error.
200	Tentative to write on protected register.
201 - 2xx	Configuration parameter error. The two less significant digits shown the number of the wrong parameter (ex. 209 Err shows an Error on P9 parameter).
301	RTD input calibration error.
305	TC and mV input calibration error.
307	RJ input calibration error.
310	Current transformer input calibration error.
311	Current input (20 mA) calibration error.
312	5 V input calibration error.
313	10 V input calibration error.
400	Control parameters error
500	Auto-zero error
502	RJ error
510	Error during calibration procedure

NOTE

- 1) When a configuration parameter error is detected, it is sufficient to repeat the configuration procedure of the specify parameter.
- 2) If error 400 is detected, push contemporarily the ▼ and ▲ pushbuttons for loading the default parameters then repeat control parameter setting.
- 3) When an error 302 is detected, push contemporarily the ▼ and ▲ pushbuttons for loading the default feedback potentiometer calibration values then repeat the feedback potentiometer calibration.
- 4) For all the other errors, contact your supplier.

GENERAL INFORMATIONS

GENERAL SPECIFICATIONS

Case: PC-ABS black color; self-extinguishing degree: V-0 according to UL 94.

Front protection - designed and tested for IP 65 (*) and NEMA 4X (*) for indoor locations (when panel gasket is installed).

(*) Test were performed in accordance with CEI 70-1 and NEMA 250-1991 STD.

Installation: panel mounting.

Rear terminal block: 21 screw terminals (screw M3, for cables from ϕ 0.25 to ϕ 2.5 mm² or from AWG 22 to AWG 14) with connection diagrams and safety rear cover.

Dimensions: DIN 43700 48x96 mm, depth 116 mm.

Weight: 450 g/ 1 lb.

Power supply:

- 100V to 240V AC 50/60Hz (-15% to + 10% of the nominal value).

- 24 V AC/DC (\pm 10 % of the nominal value).

Power consumption: 8 VA max.

Insulation resistance: > 100 M Ω according to IEC 1010-1.

Dielectric strength: 1500 V rms according to IEC 1010-1.

Display updating time: 500 ms.

Sampling time: 250 ms for linear inputs
500 ms for TC and RTD inputs.

Resolution: 30000 counts.

Accuracy: \pm 0,2% f.s.v.. \pm 1 digit @ 25 °C ambient temperature.

Common mode rejection: 120 dB at 50/60 Hz.

Normal mode rejection: 60 dB at 50/60 Hz.

Electromagnetic compatibility and safety requirements: This instrument is marked CE. Therefore, it is conforming to council directives 89/336/EEC (reference harmonized standard

EN 50081-2 and EN 50082-2) and to council directives 73/23/EEC and 93/68/EEC (reference harmonized standard EN 61010-1).

Installation category: II

Temperature drift: (CJ excluded)

< 200 ppm/°C of span for mV and TC ranges 1, 3, 5, 6, 19, 20, 21, 22.

< 300 ppm/°C of span for mA/V

< 400 ppm/°C of span for RTD range 10, 26 and TC range 0, 2, 4, 27 and 28.

< 500 ppm/°C of span for RTD range 9 and TC ranges 7, 8, 23, 24.

< 800 ppm/°C of span for RTD range 25.

Operative temperature: from 0 to 50 °C.

Storage temperature : -20 to +70 °C

Humidity: from 20 % to 85% RH, non condensing.

Protections:

- 1) WATCH DOG circuit for automatic restart.
- 2) DIP SWITCH for protection against tampering of configuration and calibration parameters.

INPUTS

A) THERMOCOUPLE

Type : L -J -K -N -R -S - T. °C/°F selectable.

External resistance: 100 Ω max, maximum error 0,1% of span.

Burn out: It is shown as an overrange condition (standard). It is possible to obtain an underrange indication by cut and short.

Cold junction: automatic compensation from 0 to 50 °C.

Cold junction accuracy : 0.1 °C/°C

Input impedance: > 1 M Ω

Calibration : according to IEC 584-1 and DIN 43710 - 1977.

STANDARD RANGES TABLE

T/C type	Ranges			
L	0	0 / +400.0 °C		---
L	1	0 / +900 °C	19	0 / +1650 °F
J	2	-100.0 / +400.0 °C		---
J	3	-100 / +1000 °C	20	-150 / +1830 °F
K	4	-100.0 / +400.0 °C		---
K	5	-100 / +1370 °C	21	-150 / +2500 °F
N	6	-100 / +1400 °C	22	-150 / +2550 °F
R	7	0 / +1760 °C	23	0 / +3200 °F
S	8	0 / +1760 °C	24	0 / +3200 °F
T	27	-199.9 / +400.0 °C	28	-330 / +750 °F

B) RTD (Resistance Temperature Detector)

Input: for RTD Pt 100 Ω, 3-wire connection.

Input circuit: current injection.

°C/°F selection: via front pushbuttons or serial link.

Line resistance: automatic compensation up to 20 Ω/wire with no measurable error.

Calibration: according to DIN 43760

Burnout: up scale.

NOTE: a special test is provided to signal OVERRANGE when input resistance is less than 15 Ω.

STANDARD RANGES TABLE

Input type	Ranges	
RTD Pt 100 Ω DIN 43760	9	- 199,9 / + 400,0 °C
	10	- 200 / + 800 °C
	25	-199,9 / +400,0 °F
	26	-330 / + 1470 °F

C) LINEAR INPUTS

Read-out: keyboard programmable between - 1999 and +4000.

Decimal point: programmable in any position

Burn out: the instrument shows the burn out condition as an underrange condition for 4-20 mA, 1-5 V and 2-10 V input types.

It shows the burn out condition as an underrange or an overrange condition (selectable by soldering jumper) for 0-60 mV and 12-60 mV input types. No indication are available for 0-20 mA, 0-5 V and 0-10 V input types.

Input type	impedance	Accuracy
11	0 - 60 mV	0.2 % + 1 digit @ 25°C
12	12 - 60 mV	
13	0 - 20 mA	
14	4 - 20 mA	
15	0 - 5 V	
16	1 - 5 V	
17	0 - 10 V	
18	2 - 10 V	

D) CURRENT TRANSFORMER INPUT FOR OUT1 FAILURE DETECTION

The instruments equipped with this feature are capable, by means of a CT, to detect and signal a possible failure of the line driven by out 1 (see "OUT 1 failure detection").

Input range: 50 mA AC.

Scaling: programmable from 10 A to 100 A (with 1 A step).

Resolution:

- for full scale up to 20 A: 0.1 A.

- for full scale from 21 A to 100 A: 1 A

Minimum duration of the period (ON or OFF) to perform the measurement: 400 ms.

E) LOGIC INPUT

The instrument is equipped with one input from contact (voltage free) for setpoint selection.
Contact open = Main setpoint.
Contact closed = Auxiliary setpoint.

NOTES

- 1) Use an external dry contact capable of switching 0.5 mA, 5 V DC.
- 2) The instrument needs 100 ms to recognize a contact status variation.
- 3) The logic input is **NOT** isolated by the measuring input.

SET POINTS

This instruments allow to use 2 set points: SP and SP2.

The set point selection is possible only by logic input.

Set point transfer:

The transfer between one set point to another (or between two different set point values) may be performed by a step transfer or by a ramp with two different programmable rate of changes (ramp up and ramp down).

Slope value: 1 - 100 eng. unit/min or step.

Set points limiter: RLO and RHI parameters, programmable.

CONTROL ACTIONS

Control action: PID + SMART

Type: One (heating or cooling) or two (heating and cooling) control outputs.

Proportional Band (Pb):

- Range: - from 1.0 to 100.0 % of the input span for process with one control output.
- from 1.5 to 100.0 % of the input span for process with two control outputs.

When $Pb=0$, the control action becomes ON/OFF.

Hysteresis (for ON/OFF control action):

from 0.1% to 10.0% of the input span.

Integral time (Ti): from 1 s to 20 min. or excluded.

Derivative time (Td): from 1 s to 10 min.

If zero value is selected, the derivative action is excluded.

Integral pre-load:

- from 0.0 to 100.0 % for one control output
- from -100.0 (cooling) to +100.0 % (heating) for two control outputs.

SMART: keyboard enabling/disabling

Auto/Manual: selectable by front pushbutton.

Auto/Manual transfer: bumpless method type

Indicator "MAN": OFF in auto mode and lit in manual mode.

OUTPUTS

Type: time proportioning

Control output updating time:

- 250 ms when a linear input is selected
- 500 ms when a TC or RTD input is selected.

Control output resolution: 1% of the span.

Direct/reverse action: programmable.

Output level indication (for control outputs):

The instrument displays separately the output 1 value and the output 2 value.

Output level limiter(for control outputs):

- For one control medium: from 0.0 to 100.0 % .
- For two control mediums: from -100.0 to +100.0%

This function may be operative at instrument start up for a programmable time (To avoid thermal shock and/or preheating the plant).

Relay outputs

Output 1: SPST contact with rated current 3 A at 250 V AC on resistive load (NO contact).

Output 2: SPST contact with rated current 2 A at 250 V AC on resistive load.

Output 3: SPST contact with rated current 2 A at 250 V AC on resistive load.

Output 4: SPST contact with rated current 2 A at 250 V AC on resistive load.

NOTE: the side C of the OUT 3 and OUT 4 are common.

Logic voltage for SSR driver (output 1 only):

- Logic level 0: $V_{out} < 0.5 \text{ V DC}$.
Logic level 1: $14 \text{ V DC} \pm 20 \% @ 20 \text{ mA}$.
 $24 \text{ V DC} \pm 20 \% @ 1 \text{ mA}$.

Maximum current = 20 mA.

NOTE: The OUT 1 can be select by jumper as relay output or SSR drive output.

Output status indication: 4 indicators (OUT 1, 2, 3 and 4) are lit when the respective output is in ON condition.

ALARMS

This instrument is equipped with 3 independent outputs programmable as:

- heating + alarm 1 + alarm 2
- heating + cooling + alarm 2
- heating + alarm 1 + Out 1 failure detection (or

alarm 2 + Out 1 failure detection in OR condition)

- heating + cooling + Out 1 failure detection (or alarm 2 + Out 1 failure detection in OR condition)

An optional output is available and it performs the alarm 3 output.

Actions: Direct or reverse acting.

Alarm functions: each alarm can be configured as process alarm, band alarm or deviation alarm.

Alarm reset: automatic or manual reset programmable on each alarm.

Stand by (mask) alarm: each alarm can be configured with or without stand by (mask) function.

This function allows to delete false indication at instrument start up and/or after a set point change.

Process alarm:

Operative mode : High or low programmable.

Threshold : programmable in engineering unit within the input span.

Hysteresis : programmable from 0.1 % to 10.0 % of the input span (P4 - P3).

Band alarm

Operative mode: Inside or outside programmable.

Threshold : programmable from 0 to 500 units.

Hysteresis : programmable from 0.1 % to 10.0 % of the input span.

Deviation alarm

Operative mode : High or low programmable.

Threshold : programmable from - 500 to +500 units.

Hysteresis : programmable from 0.1 % to 10.0 % of the input span.

SERIAL COMMUNICATION INTERFACE

Type: RS-485 insulated

Protocol type: MODBUS, JBUS, ERO polling/
selecting.

Baud rate: programmable from 600 to 19200
BAUD.

Byte format: 7 or 8 bit programmable.

Parity: even, odd or none programmable.

Stop bit : one.

Address :

- from 1 to 95 for ERO protocol
- from 1 to 255 for all the other protocols

Output voltage levels: according to EIA
standard.

MAINTENANCE

- 1) REMOVE POWER FROM THE POWER SUPPLY
TERMINALS AND FROM RELAY OUTPUT
TERMINALS
- 2) Remove the instrument from case.
- 3) Using a vacuum cleaner or a compressed air
jet (max. 3 kg/cm²) remove all deposit of dust
and dirt which may be present on the louvers
and on the internal circuits trying to be careful
for not damage the electronic components.
- 4) To clean external plastic or rubber parts use
only a cloth moistened with:
 - Ethyl Alcohol (pure or denatured) [C₂H₅OH] or
 - Isopropil Alcohol (pure or denatured)
[(CH₃)₂CHOH] or
 - Water (H₂O)
- 5) Verify that there are no loose terminals.
- 6) Before re-inserting the instrument in its case,
be sure that it is perfectly dry.
- 7) re-insert the instrument and turn it ON.

APPENDIX A DEFAULT PARAMETERS

DEFAULT OPERATIVE PARAMETERS

The control parameters can be loaded with predetermined default values. These data are the typical values loaded in the instrument prior to shipment from factory. To load the default values proceed as follows:

- The internal switch should be closed.
- The SMART function should be disabled.
- The upper display will show the process variable while the lower display will show the set point value.
- Held down ▼ pushbutton and press ▲ pushbutton; the display will show:

OFF
dFLt OFF dFLt

- Press ▲ or ▼ pushbutton; the display will show:

ON
dFLt ON dFLt

- Press FUNC pushbutton; the display will show:

LOAD LOAD

This means that the loading procedure has been initiated. After about 3 seconds the loading procedure is terminated and the instrument reverts to NORMAL DISPLAY mode.

The following is a list of the default operative parameters loaded during the above procedure:

PARAMETER	DEFAULTVALUE
SP	= Initial scale value
SnRT	= Disable

n.SRt	=OFF
SP2	= Initial scale value
nnn	= OFF
A1	= Initial scale value for process alarm 0 for deviation or band alarm
HSA1	= 0.1 %
A2	= Initial scale value for process alarm 0 for deviation or band alarm
HSA2	= 0.1 %
A3	= Initial scale value for process alarm 0 for deviation or band alarm
HSA3	= 0.1 %
PB	= 4.0 %
HyS	= 0.5 %
ti	= 4.00 (4 minutes)
td	= 1.00 (1 minute)
IP	= 30 %
Cy1	= 15 seconds for relay output 4 seconds for SSR output
Cy2	= 10 seconds for P8 = Alr 4 seconds for P8 = OIL 2 seconds for P8 = H2O
rC	= 1.00 for P8 = Alr 0.80 for P8 = OIL 0.40 for P8 = H2O
OLAP	= 0
rL	= Initial scale value
rH	= Full scale value
Grd 1	= Infinite (step transfer)
Grd 2	= Infinite (step transfer)
OLH	= 100 %
tOL	= Infinite
Hbd	= 50 % of the full scale value
SCA	= 100% of the full scale value
rnP	= 25 %/s.

Appendix A.1

DEFAULT CONFIGURATION PARAMETERS

The configuration parameters can be loaded with predetermined default values. These data are the typical values loaded in the instrument prior to shipment from factory. To load the default values proceed as follows:

- a) The internal switch (V1, see fig. 14) should be open.
 b) The upper display will show:

CO n F **CO n F**

- c) Push the ▼ pushbutton; the lower display will show the firmware version.

CO n F
A. 00 **CO n F A. 00**

- d) Maintaining the pressure on the ▼ pushbutton push the ▲ pushbutton also. The instrument will show

OFF
dFLt **OFF dFLt**

- e) Press ▲ pushbutton to select between table 1 (european) or table 2 (american) default set of parameters; the display will show:

tb. 1
dFLt **tb. 1 dFLt**

- f) Press FUNC pushbutton; the display will show:

LOAD **LOAD**

This means that the loading procedure has been

initiated. After about 3 seconds the loading procedure is terminated and the instrument reverts to display "CO n F".

PARA.	TABLE 1	TABLE 2
SEr 1	Ero	Ero
SEr 2	1	1
SEr 3	19200	19200
SEr 4	7E	7E
P1	3	20
P2	----	----
P3	0	0
P4	400	1000
P5	rEL	rEL
P6	rEV	rEV
P7	1	1
P8	Alr	Alr
P9	H.A.	H.A.
P10	OFF	OFF
P11	10	10
P12	0	0
P13	H.A	H.A.
P14	0	0
P15	H.A	H.A
P16	OPrt.	OPrt
P17	0	0
P18	0.1	0.1
P19	0	0
P20	0	0
P21	rEV	rEV
P22	OFF	OFF
P23	rEV	rEV
P24	OFF	OFF
P25	rEV	rEV
P26	OFF	OFF
P27	0	0
P28	Not available	Not available
P29	ON	ON
P30	ON	ON

P31	2	2
P32	OFF	OFF
P33	30	30
P34	1.5	1.5
P35	1.0	1.0
P36	00.50	00.50
P37	0	0
P38	Not available	Not available
P39	10	30
P40	nO.FL	nO.FL
P41	0	0
P42	0	0
P43	10	10
P44	Pld	Pld
P45	Fn.SP	Fn.SP
P46	0	0

Appendix A.3



Factories

ITALY

ERO ELECTRONIC S.r.l.
Via E. Mattei, 21
28100 Novara

MALTA

ERO ELECTRONIC (Malta) Limited
Tübingen Centre
F17, Mosta Technopark
Mosta MST 02

Representatives

CHINA

TIANJIN VEGA COMPANY Ltd
95 Zhi Cheng Road
Hebei District
300232 Tianjin PRC
Tel.: 022-26273296
Fax.: 022-26273297

UNITED KINGDOM / EIRE

EUKERO CONTROLS LTD
Unit 17 Waterside Business Centre
Raishead Road - Isleworth
Middlesex TW7 7BY
Tel.: 0181/5684664
Fax: 0181/5684115

U.S.A.

AMERICAN ERO ELECTRONIC CORP.
365 Bateman Circle
P.O. Box 3608
BARRINGTON ILL. 60010
Tel: 847-9349600
Fax: 847-9349605

Branch Offices

BENELUX

ERO ELECTRONIC BENELUX S.A./N.V.
Rue du Val-Notre-Dame, 384
4520 WANZE - Belgium
Tel.: 085-274080
Fax: 085-274081

BRAZIL

ERO ELECTRONIC DO BRASIL
Industria e Comercio Ltda
Rua Garibaldi, 659 - Conj. 202
90035-050 Porto Alegre - RS - Brasil
Tel.: 051-2214888
Fax.: 051-2214734

FRANCE

ERO ELECTRONIC Sarl
ZAC du Chêne
34, rue du 35ème Régiment d'Aviation
69673 BRON Cedex
Tel.: 0478267979
Fax: 0478267800

GERMANY

ERO ELECTRONIC GmbH
Quarzweg 1a
D-65604 Elz
Tel.:06431-95680
Fax: 06431-57493

SOUTH AFRICA

ERO ELECTRONIC S.A.
P.O. Box 43112
2042 INDUSTRIAL
Tel.: 011-4742278
Fax: 011-4749404

SWITZERLAND

ERO ELECTRONIC AG
Kempttalstrasse 27/A
8320 FEHRALTORF
Tel.: 01-9542220
Fax: 01-9543284



Ero Electronic s.r.l.

Via Nino Bixio, 47/49
20026 Novate Milanese (Milano)
Italy

Tel. (+39 2) 354781
Fax. (+39 2) 3546625

A Siebe Group Company